



# A Reconfigurable All-Optical Logic Device Using Blue and Red Shift

Speaker: Ying Tang

12/20/2019



### **Motivation**

- High-speed all-optical logic gates are key elements to realize alloptical signal processing functions.
- Reconfigurable multi-logic gates are preferred as they can provide a more flexible set of networking functions.
- The existing reconfigurable multi-logic gate designs have already been proposed have several shortcomings:
  - Increasing the cost and complexity of the system by adding an additional continuous wave (CW) input or clock signal.
  - The operation is complicated by changing the parameters of input data signals.





### **Paper Review**

- K. Sun, J. Qiu, M. Rochette, L. R. Chen, "All-Optical Logic Gates (XOR, AND, and OR) Based on Cross Phase Modulation in a Highly Nonlinear Fiber," *Proc., European Conference on Optical Communication (ECOC)*, September, 2009.
- J. Qiu, K. Sun, M. Rochette, L. R. Chen, "Reconfigurable All-Optical Multilogic Gate (XOR, AND, and OR) Based on Cross-Phase Modulation in a Highly Nonlinear Fiber," *IEEE Photon. Technol. Lett.*, vol. 22, no. 16, pp. 1199–1201, August, 2010.





#### **Operation Principle**

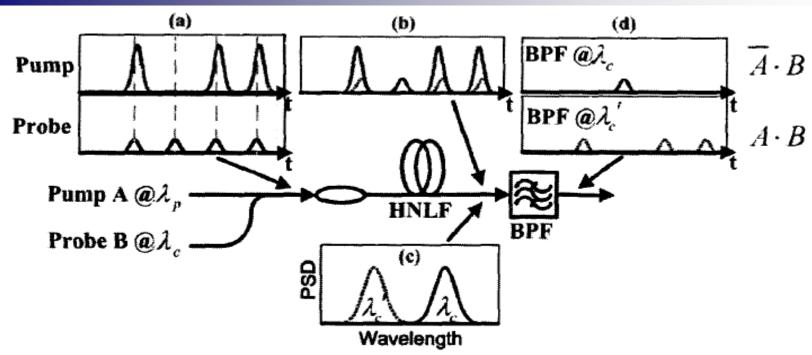


Fig. 1. Illustrating the principle of operation (Signal A acts as a pump and signal B acts as a probe). HNLF: highly nonlinear fiber, BPF: bandpass filter.

One lobe at  $\lambda_c$  is identical to the probe spectrum before XPM which is formed by the logical zeros of pump A, and a second lobe at  $\lambda_c$  is a spectrally shifted replica of the probe spectrum, which is formed by the logical ones of pump A.





#### **Operation Principle**

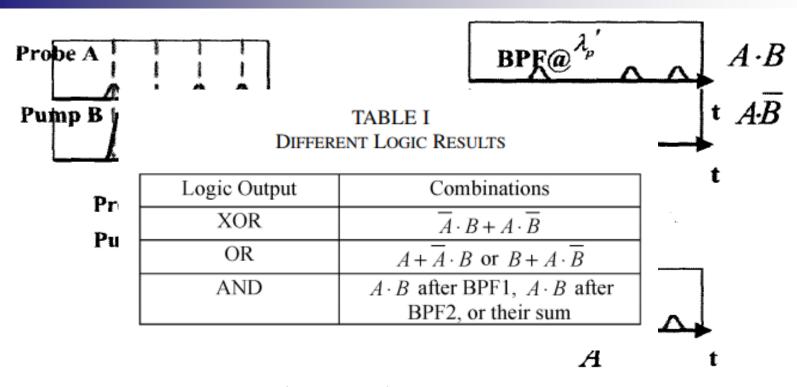


Fig. 2. Illustrating the principle of operation (Signal A acts as a probe and signal B acts as a pump).

The second lobe can be red-shifted or blue-shifted, depending on which edge of the pump signal is superimposed on the probe signal.





### **Experimental Setup**

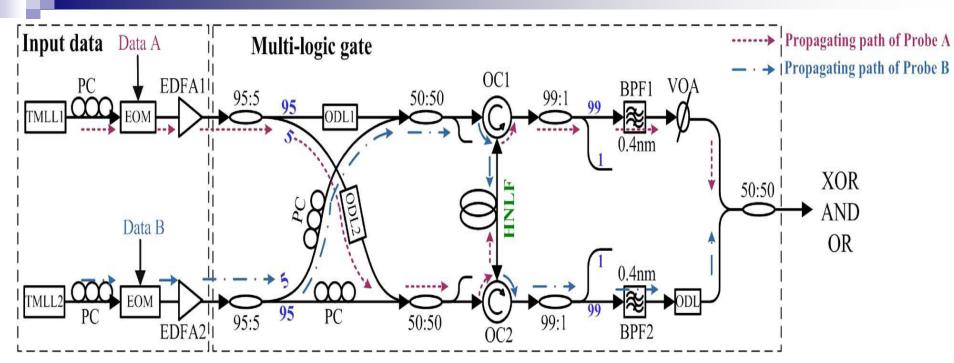



Fig. 3. Experimental setup. TMLL: tunable mode-locked laser, PC: polarization controller, EOM: electrooptical modulator, EDFA: erbium-doped fiber amplifier, ODL: optical delay line, OC: optical circulator, HNLF: highly nonlinear fiber, BPF: bandpass filter, VOA: variable optical attenuator.

The HNLF has a length of 1007 m, nonlinearity coefficient of 12.5 W<sup>-1</sup>·km<sup>-1</sup>, chromatic dispersion of 0.69 ps/nm·km and dispersion slope of 0.0074 ps/nm<sup>2</sup>·km at 1550.0 nm.





### **Experimental Setup**



$\lambda_{A} = 1555.24 \text{ nm}, \lambda_{B} = 1541.32 \text{ nm}$		
Logic	$\lambda_{\mathrm{BPF2}}$	$\lambda_{\mathrm{BPF1}}$
XOR	1541.40 nm	1555.08 nm
AND	1538.32 nm	1558.52 nm
OR	1541.40 nm	1555.08 nm

- For the XOR gate,  $A\cdot \bar{B}$  and  $\bar{A}\cdot B$  are used after BPF1 and BPF2, respectively.
- For the AND gate,  $A \cdot B$  can be achieved after BPF1, after BPF2, or at the combined output.
- For the OR gate,  $A \cdot \overline{B}$  and B are used after BPF1 and BPF2, respectively.



### COMPUTER SCIENCE

### **Result 1**

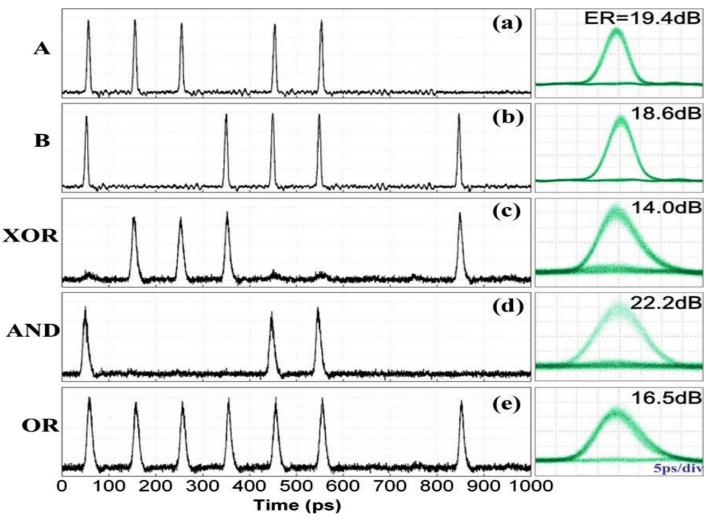


Fig. 4. Experimental results. ER: extinction ratio.







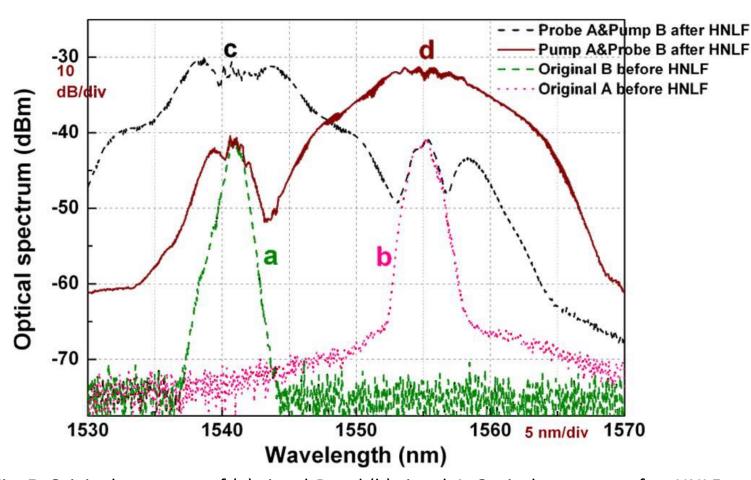


Fig. 5. Original spectrum of (a) signal B and (b) signal A. Optical spectrum after HNLF of (c) combined probe A and pump B and (d) combined pump A and probe B.



#### Result 3


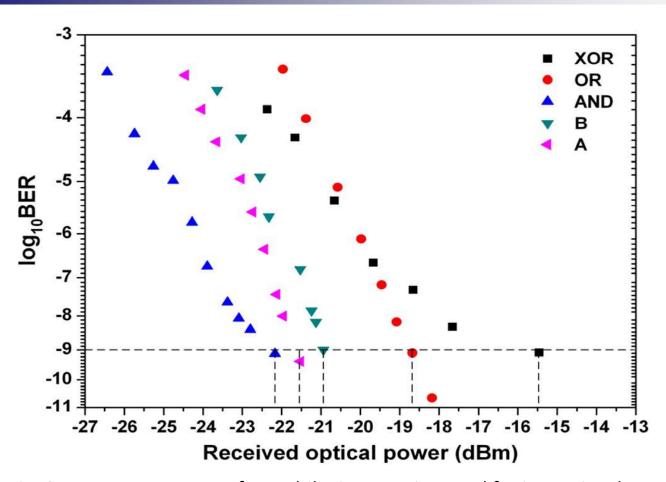


Fig. 6. BER measurements for multilogic operations and for input signals A and B.

Power penalties at a BER of  $10^{-9}$  for XOR, AND, and OR are 5.9, -1.0, and 2.9 dB, respectively.



#### **Discussion**



$$\Delta v_{\text{max}} = \frac{\gamma_1 P_2 L}{\pi T_0 |\delta|} = \frac{\gamma_1 P_2 L_W}{\pi T_0}$$

### Two way to maximize the XPM-induced chirp: There is a tradeoff between pump power and

- Increase the power of the bff length.
- Increase the walk-off length  $L_W$ .

Increased  $P_2 o$  overlap between signals o a larger wavelength separation o reduced  $L_W$ 







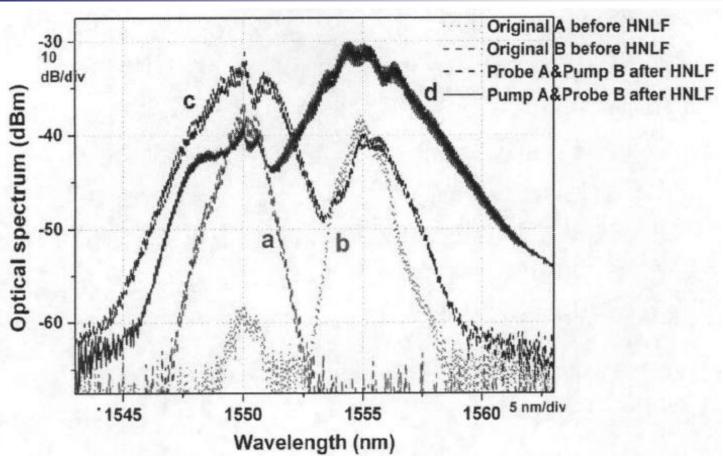


Fig. 7. Spectrum when the wavelength separation between signals A and B is 5.5 nm. (a) signal B and (b) signal A. Optical spectrum after HNLF of (c) combined probe A and pump B and (d) combined pump A and probe B.



#### **Discussion**

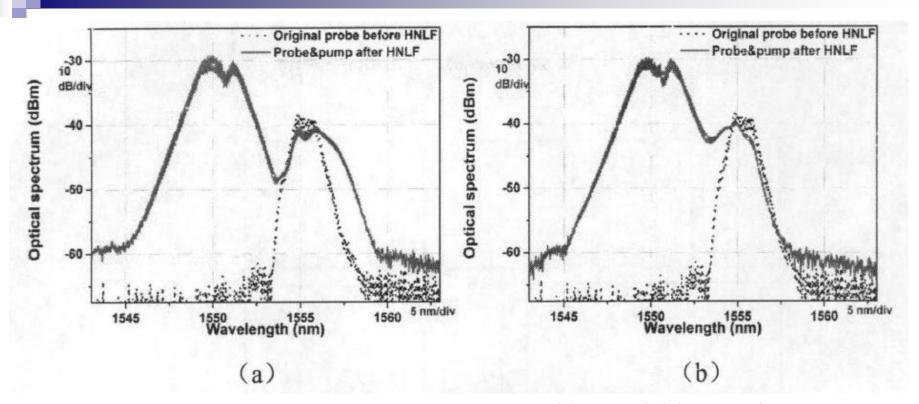


Fig. 8. Spectrum broadening induced by XPM. (a) red shift (b) blue shift.

The broadened spectrum induced by XPM varies with the delay between the pump and the probe. When the wavelength of probe is larger than that of pump, the red shift is more suitable.



#### **Conclusions**

- A simple and novel reconfigurable all-optical multilogic device which uses a single HNLF without any additional input operating at 10 Gb/s is experimentally demonstrated.
- The experiment can obtain error-free performance, a receiver sensitivity less than -15.0 dBm for a BER = 10<sup>-9</sup>, and power penalties of 5.9, -1.0, and 2.9 dB for XOR, AND, and OR operations, respectively.
- ☐ All gates are believed to operate successfully beyond 100 Gb/s based on the fast time response of the Kerr effect.





## Thank you for your attention!

Speaker: Ying Tang

12/20/2019